

Torkinator Brush Change Instructions


1, Open the cover.




2, You will see the seal, felts and brush caps.




3, Open the brush caps

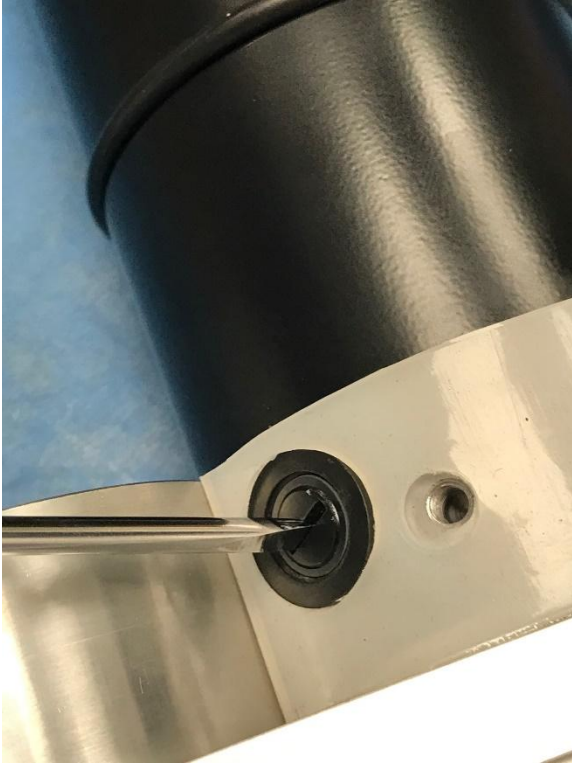

4, The brush will show.

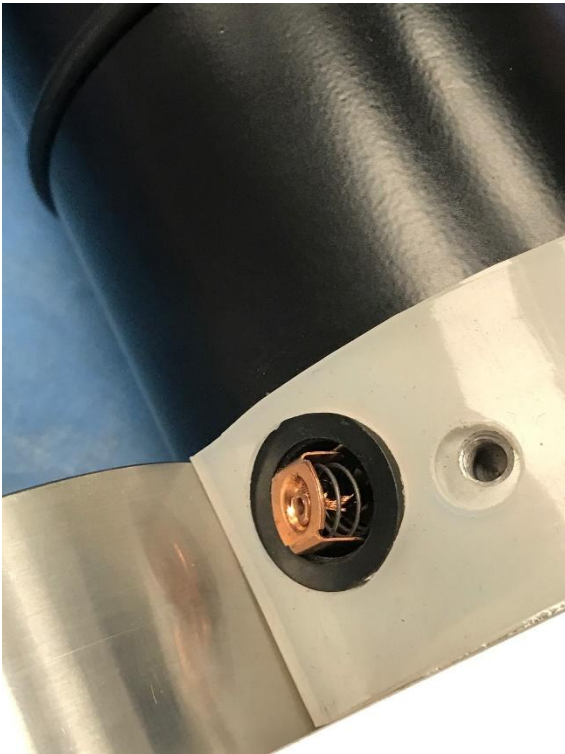

5, Take out all 4 brushes.

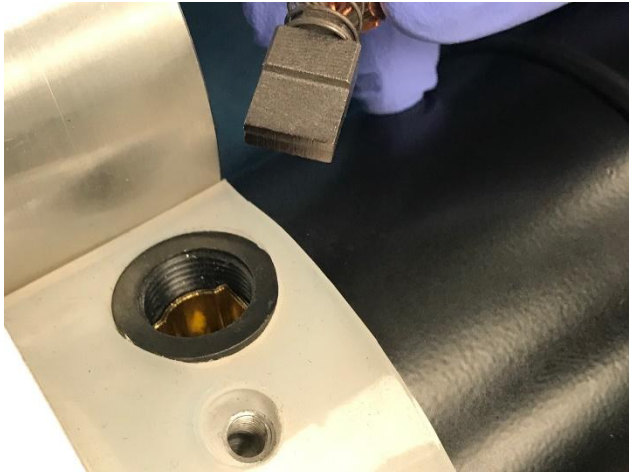

6, After all 4 brushes are taken out, using compressed air to blow out the brush dust from the brush holders as much as you can. When you do this step, please make sure you are outdoor and your hair, face, body and cloth are protected. The brush dust is very black and it can stick on your cloth, hair and skin.

7, Go backward the steps to install the brushes. Change all 4 together. Don't just change 1, 2 or 3.

8, Runs the motor 24Vdc about 15 minutes each direction. If it sounds good, you are ready to go.

Have fun!