

Turtle Racing Losi 5ive AirFilter Box for use with Baja Filter

TUR-L0006

Kit includes:

Billet Air Box 2pcs.

7pcs M3x10 Socket Heads

2pcs M5x50 Flat Heads

2pcs M6x8 Button Heads


2pcs -009 O-ring

1pc 2-044 N1470-70 O-ring

Needed to Complete; HPI #15411



1. Remove stock air filter assembly and carb.

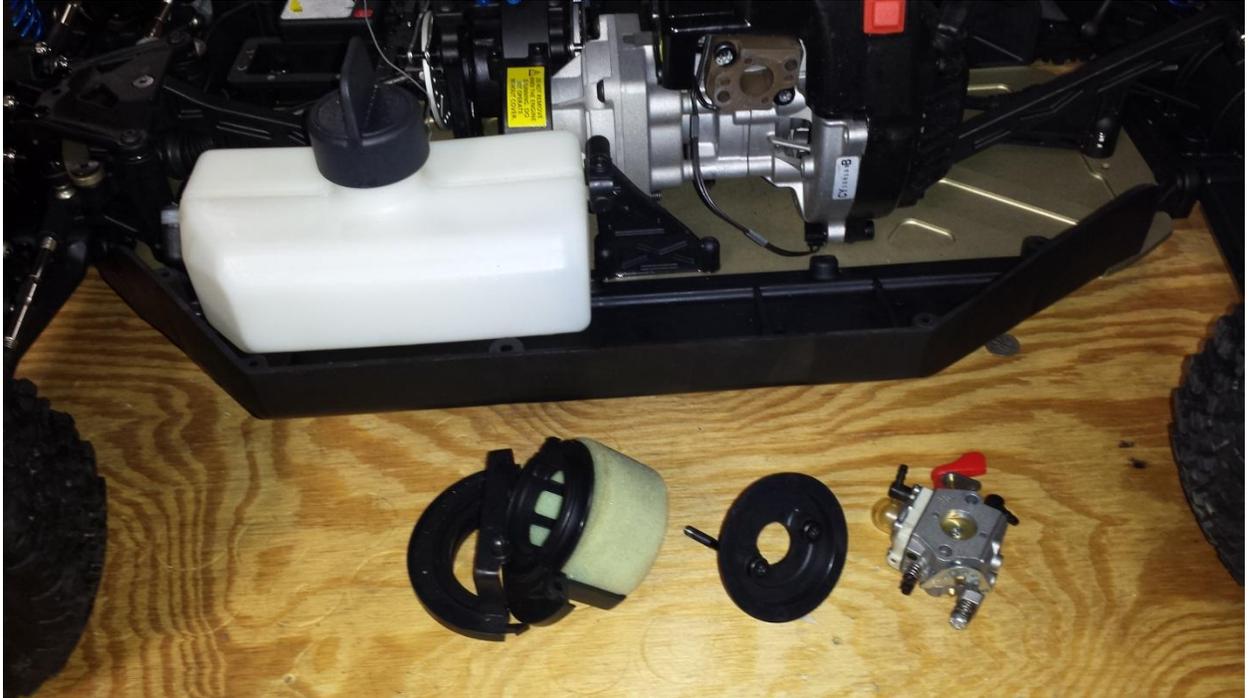

2. Remove Turtle Racing AirFilter Box from packaging and separate lid from base. Make sure all components are clean and free of debris.



3. Install Long O-ring into groove in lid. Make sure O-ring is seated all the way in O-ring groove. Lightly grease or petroleum jelly the O-ring.



- Using 2pcs. M5x50 Flat Head screws, install Turtle Racing AirFilter Base and carb onto manifold. Make sure to hook throttle linkage and fuel lines. We recommend using new gaskets and blue/medium ThreadLock on the M5x50 Flat Head screws. It is your responsibility to be certain the M5 Flat Heads are the proper length for your application. Please test fit and make sure that the screws are not too long and make sure they secure the Turtle Racing AirFilter Box properly. If the screws are too long please trim them to proper length.



5. Place lid into base and press firmly and evenly to seat O-ring. Install 7pcs-M3x10 Socket heads with blue/medium threadlock, tighten each screw a little bit at a time to seat lid to base. Make sure while tightening screws that the O-ring is not sticking out around the periphery.



6. Lightly grease or petroleum jelly and install -009 (small) O-rings onto 2pcs. M6x8 Button Head screws. Install 2pcs. M6x8 Button Heads with O-rings onto Air Box lid using blue/medium threadlock.



7. It is your responsibility to properly install and maintain your air filter. We highly recommend BelRay Foam Filter oil; do not use air filter oil for paper or gauze elements. We have found a huge size difference on the HPI filter mount that mates with our AirFilter box, so we recommend a light coat of grease around the O-ring on the HPI part.



8. We also recommend a light coat of grease on the face of the HPI foam element to help seal to the cage.



9. Finish installing the HPI Filter to your Turtle Racing AirFilter Box. You may also use an Outerwear for added protection.




Turtle Racing AirFilter Box removal


1. Remove 2pcs. M6x8 Button Head screws.



2. Insert 3mm hex wrench through hole and unscrew M5x50 Flat Head screws. We do not recommend Ball end drivers for this, you risk breaking the ball off.

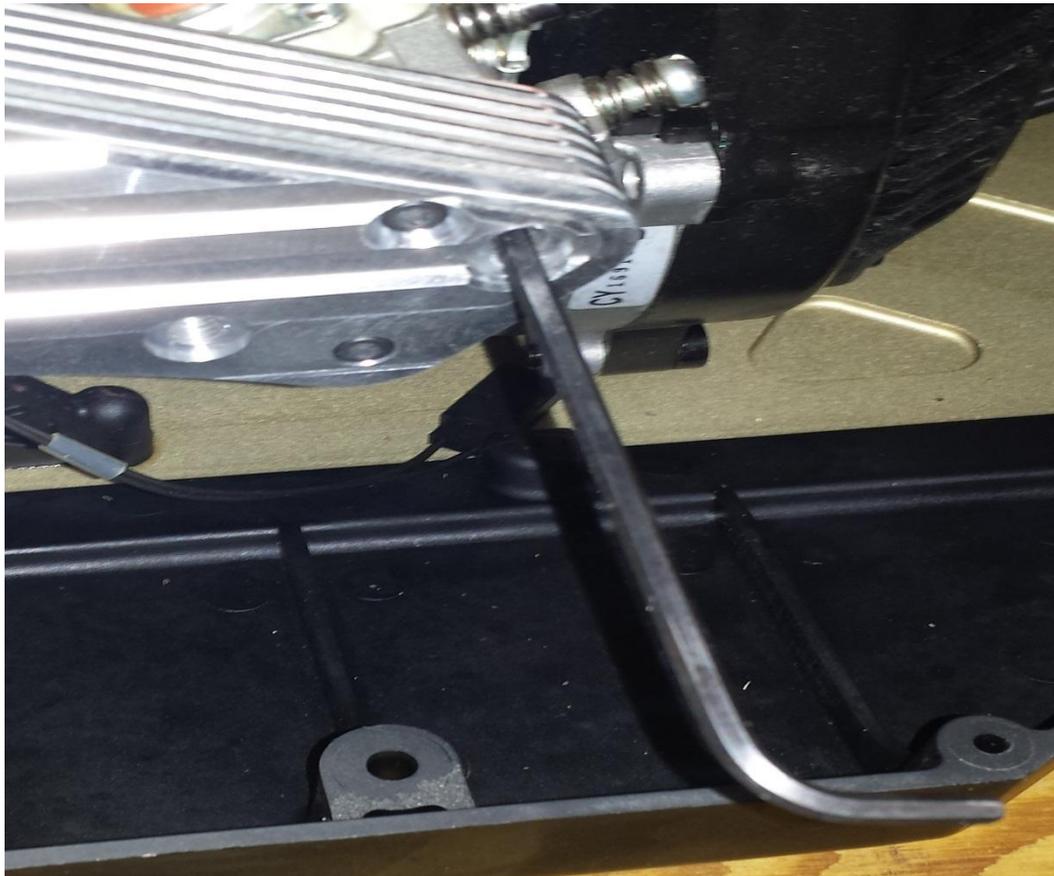

3. Remove Turtle Racing AirFilter Box with carb.

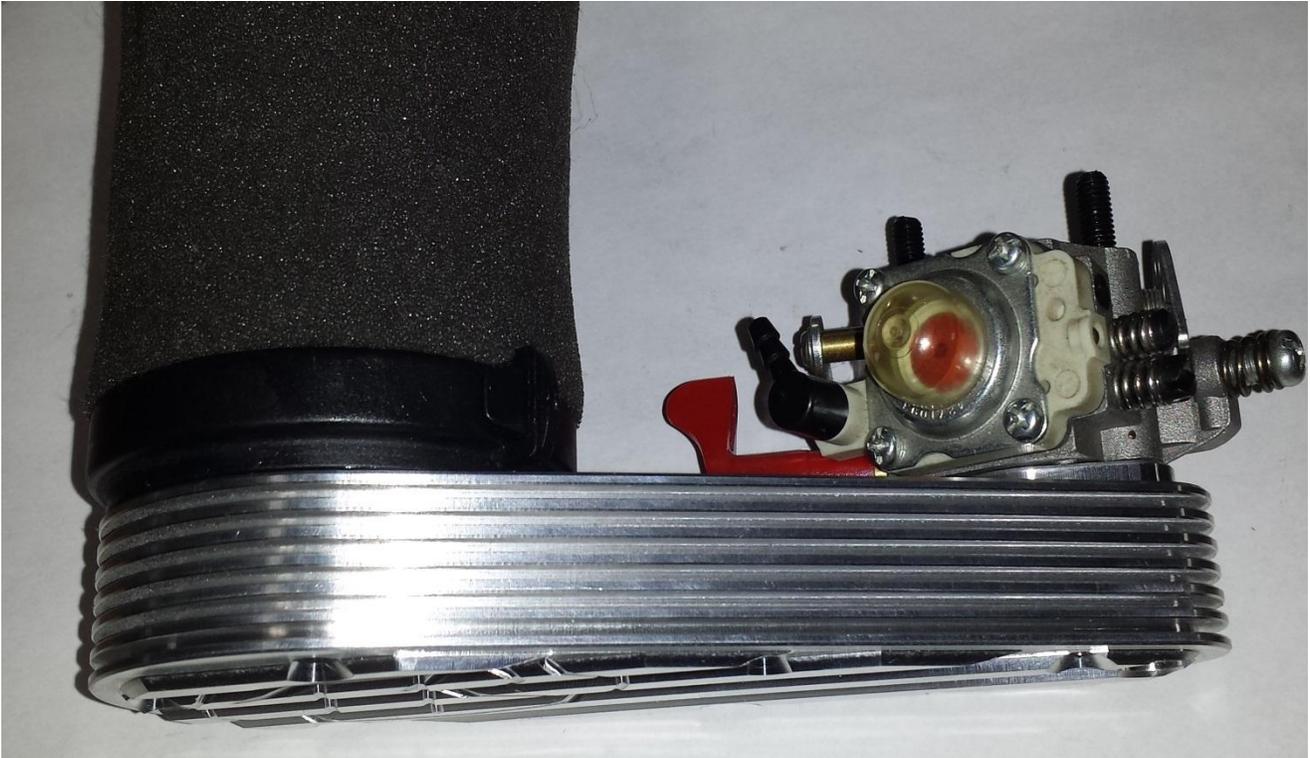

Turtle Racing is not responsible for your air filter or the life of your motor. Please double and triple check your assembly while installing and while operating.
Thank you for purchasing your Turtle Racing AirFilter box.